




Combination Meter

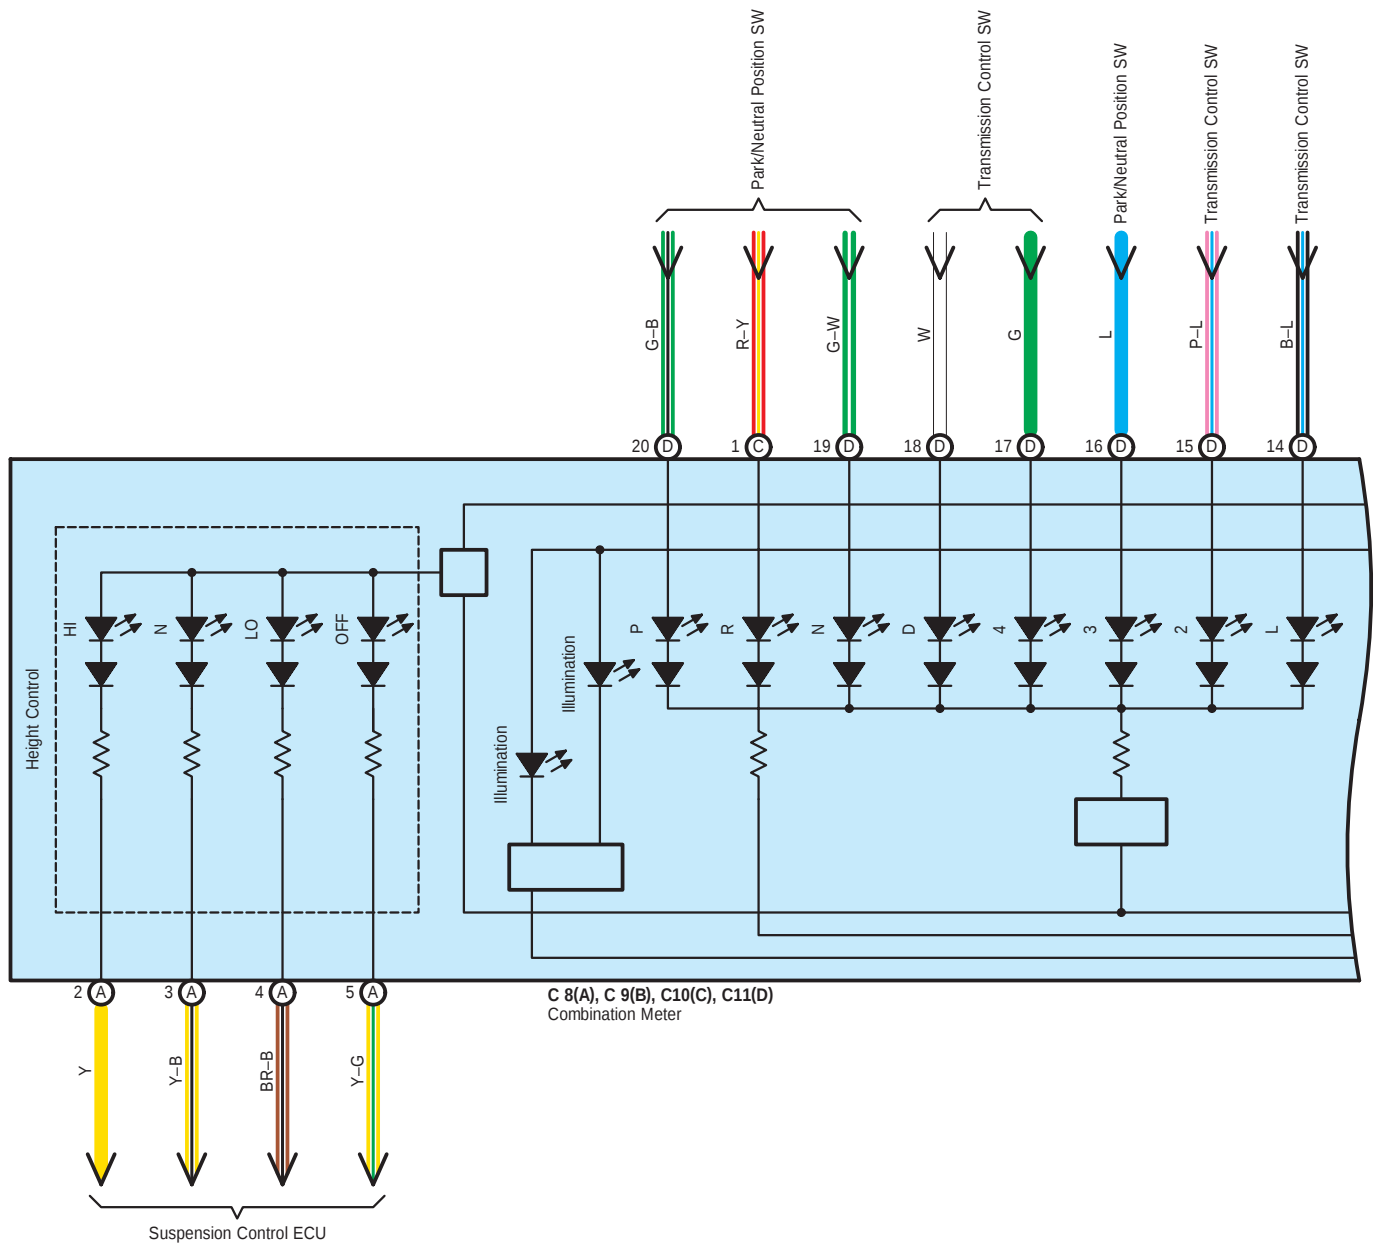


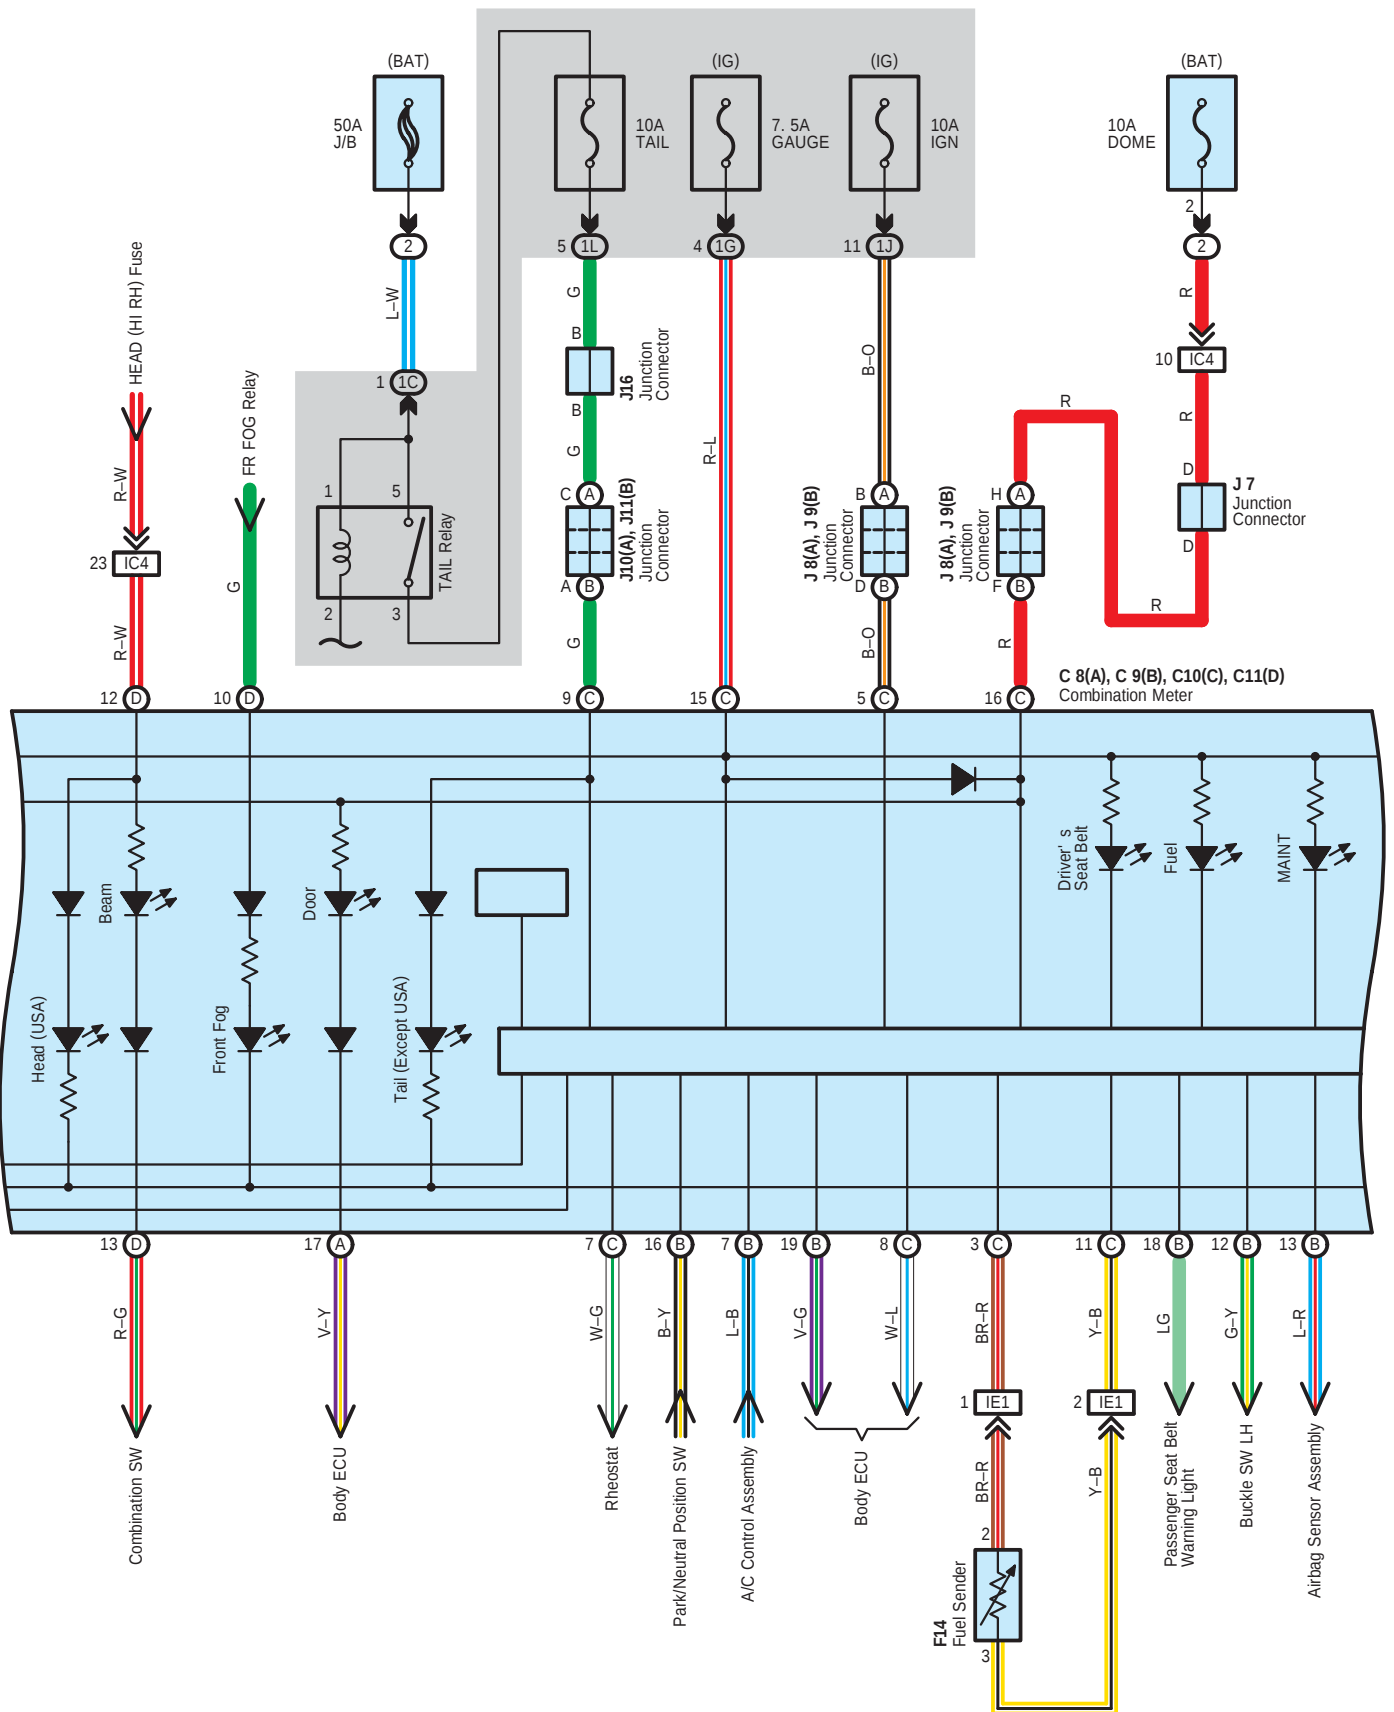

Combination Meter

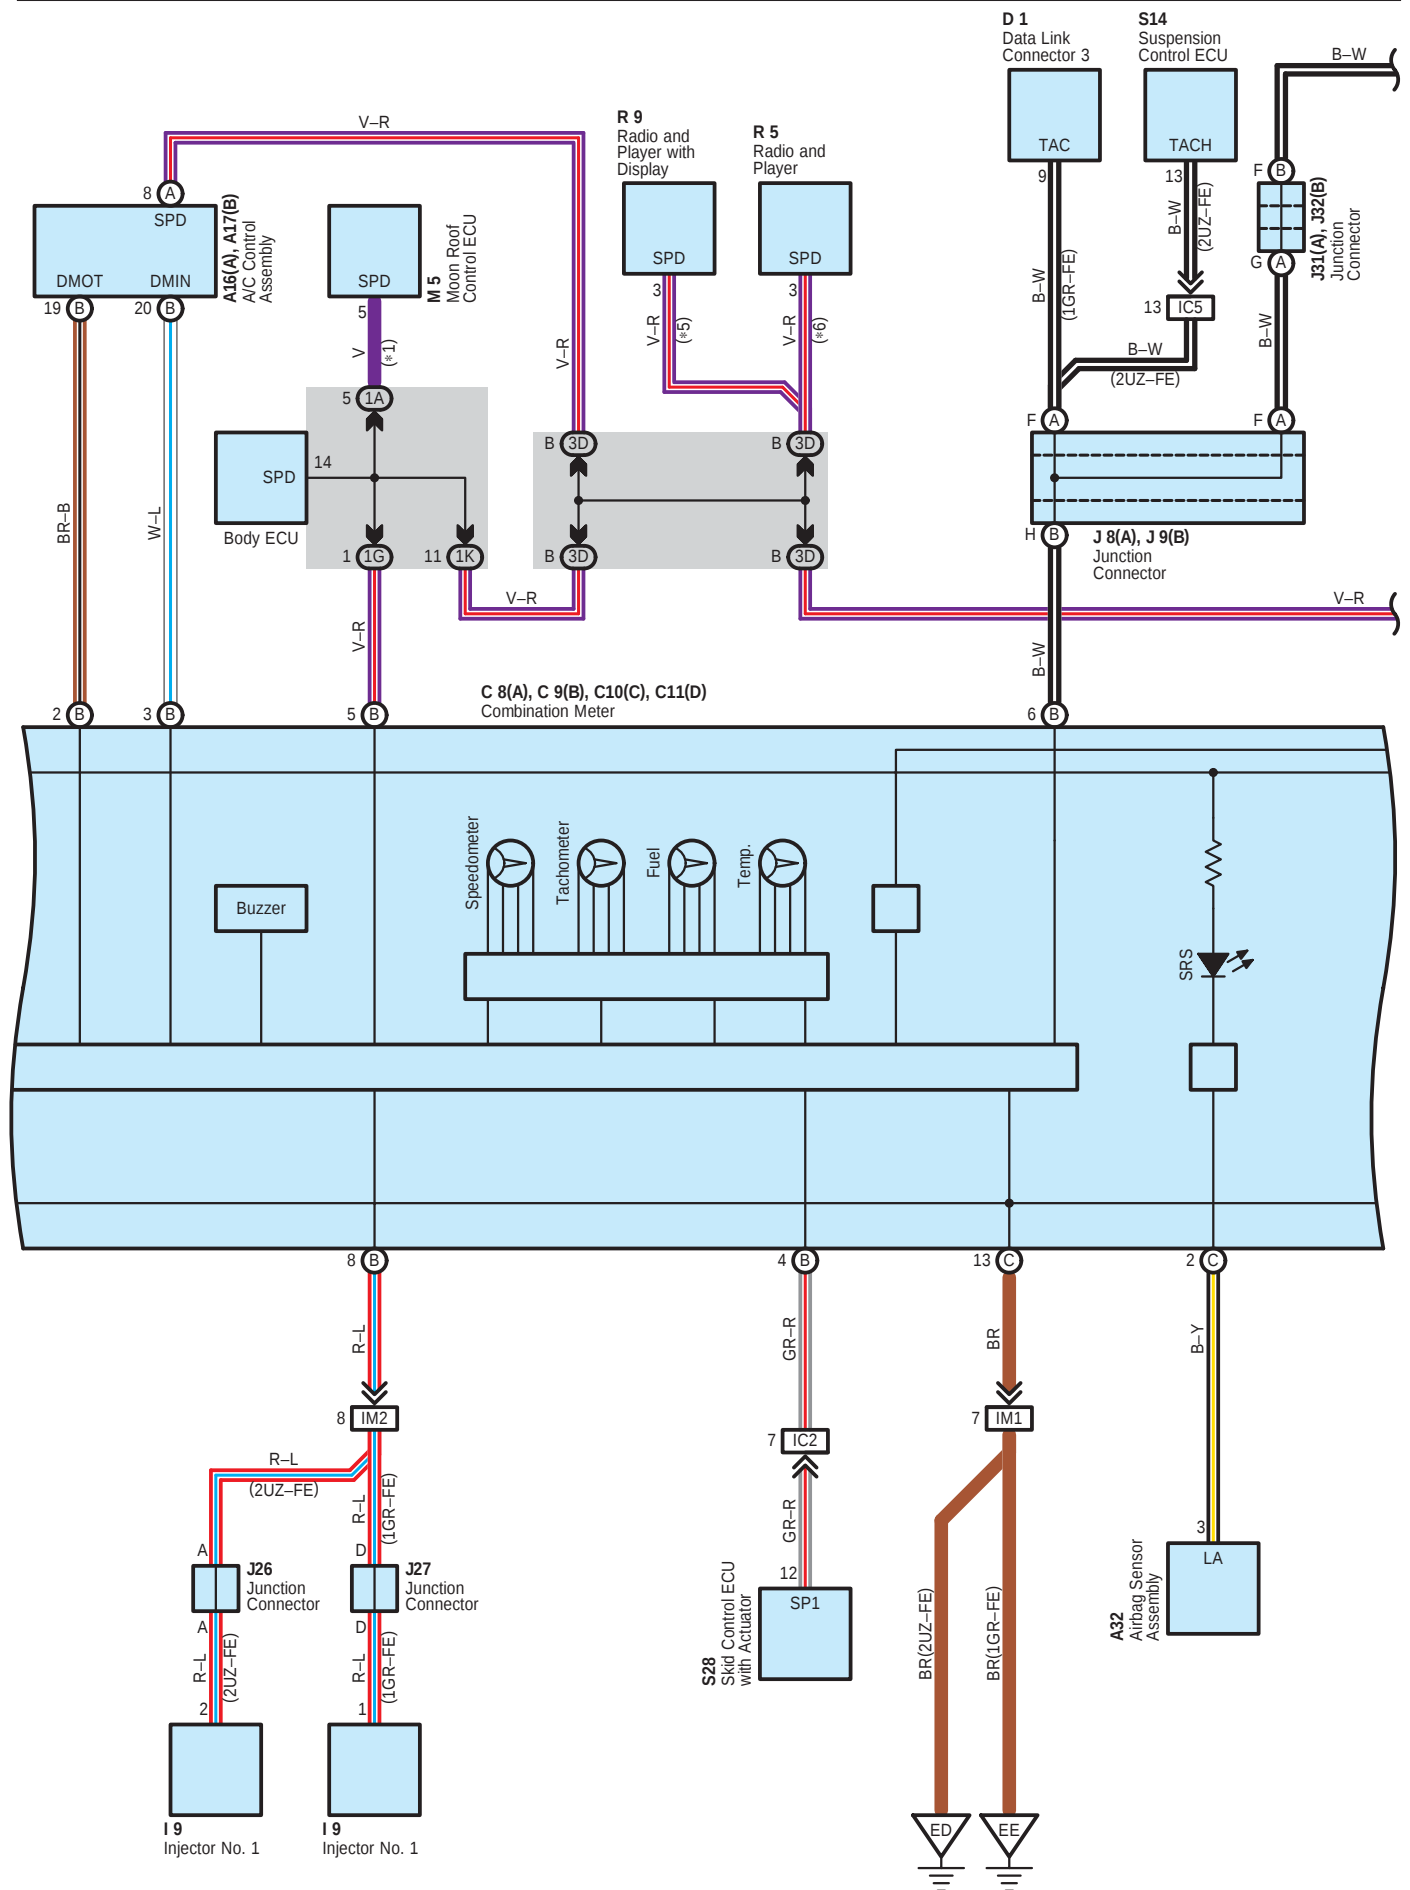

Combination Meter

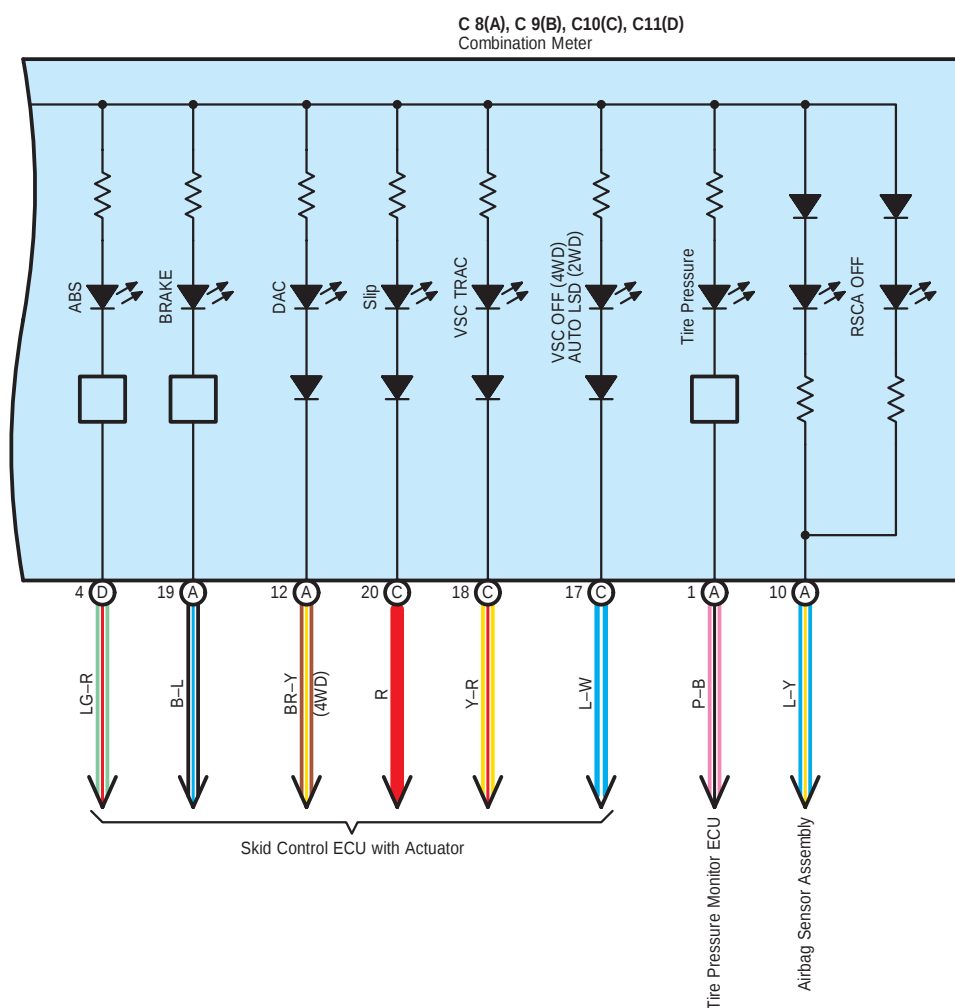

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
A16	A	36	J2		33 (2UZ-FE)	J32	B	38
A17	B	36			35 (1GR-FE)	M5		41
A32		36	J7		38	O1		33 (2UZ-FE)
C8	A	37	J8	A	38			35 (1GR-FE)
C9	B	37	J9	B	38	R5		39
C10	C	37	J10	A	38	R9		39
C11	D	37	J11	B	38	S14		39
D1		37	J16		38	S22		41
E7		37	J26		38	S28		33 (2UZ-FE)
F9		37	J27		38			35 (1GR-FE)
F14		40	J29	A	38	T16		39
I9		33 (2UZ-FE)	J30	B	38	W1		33 (2UZ-FE)
		35 (1GR-FE)	J31	A	38			35 (1GR-FE)

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Roof Wire and Driver Side J/B (Lower Finish Panel)
1C	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1G	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1J		
1K		
1L		
3D	28	Instrument Panel Wire and Center J/B (Instrument Panel Brace RH)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	46	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IC4		
IC5		
IE1	46	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IM1	47	Engine Wire and Instrument Panel Wire (Right Side of Blower Unit)
IM2		
IN1	47	Instrument Panel Wire and Engine Room Main Wire (Right Kick Panel)
IO2	47	Instrument Panel Wire and Floor Wire (Right Kick Panel)

 : Ground Points

Code	See Page	Ground Points Location
EB	44 (2UZ-FE)	Front Left Fender
	45 (1GR-FE)	
ED	44 (2UZ-FE)	Left Bank Cylinder Head
EE	44 (2UZ-FE)	Rear Side of Cylinder Block
	45 (1GR-FE)	Rear Side of Right Bank Cylinder Block